

How To Sync the Inmotion K-TA3W-433/915 with Transmitter

Note: This procedure will not work with Hardwired Strobe/Sirens with serial numbers starting with F060XXXX.

To sync the LED horn with TX is the same as you pairing from Tx to Rx in Normal system.

- 1) Make sure the Receiving Unit has no power connected. (remove X1 and/or X2 wire)
- 2) Make sure the K-TA3W Strobe/Siren is powered up.
- 3) For K404 Transmitter Press Emergency Off, then press East, West Pushbuttons Alternately 4 times.
For K606 Transmitter Press Emergency Off, then press South, North Pushbuttons Alternately 4 times.
For K806 Transmitter Press Emergency Off, then press Aux1, Aux2 Pushbuttons Alternately 4 times.
For K808 Transmitter Press Emergency Off, then press Aux1, Aux2 Pushbuttons Alternately 4 times.
- 4) Press SYNC. in LED HORN for 3~5 secs until one bank of LED's blinks green and red.
- 5) For K404 Transmitter Press Up and East Pushbuttons simultaneously for more than 5 seconds
For K606 Transmitter Press Up and South Pushbuttons simultaneously for more than 5 seconds.
For K806 Transmitter Press Up and Aux 2 Pushbuttons simultaneously for more than 5 seconds.
For K808 Transmitter Press Up and Aux 2 Pushbuttons simultaneously for more than 5 seconds.

After all the LED's stop flashing the procedure is complete. Power up the receiving unit to test.

How To Change the settings for the Inmotion K-TA3W-433/915

- 1) Make sure the Receiving Unit has no power connected. (remove X1 and/or X2 wire)
- 2) Make sure the K-TA3W Strobe/Siren is powered up.
- 3) Twist the EMO on the transmitter. You should have blinking green status light.
- 4) Press and hold East 1st step on transmitter and press the LED, Sound & Vol. buttons multiple times until you achieve the desired settings.
- 5) Then release the East 1st button and then press it once to save the settings.
- 6) Repeat the same steps for each button on the transmitter including 2nd step.