


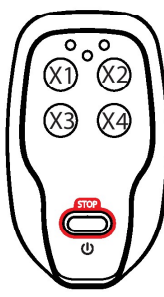
(N400) Copy from an original Transmitter to a NEW transmitter

Step1

1. Press  for 5 sec. to turn off both transmitters .

Step2


1. Press **X3** once then press **X4** once vice versa for 4 times. The Status LED blinks green and red. Press **X1** until (> 5 sec.) the "1" and "2" LED blinks faster, release the button.



Original

Step2

1. Press **X3** once then press **X4** once vice versa 4 times. The Status LED blinks green and red. Press **X2** until (> 5 sec.) the "1" and "2" LED stay ON, then release the button. Press STOP for 5 sec. to Turn on transmitter. Done!

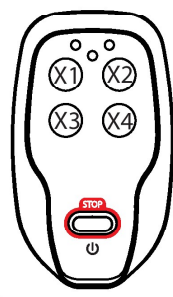


NEW copy


Ps. Keep distance less than 3 feet while copying

(N400) Copy from Receiver to a new Transmitter


Step1

Power the receiver. Press the SYNC. button >3 sec. The STATUS blinks .


 Warning against electrical voltage

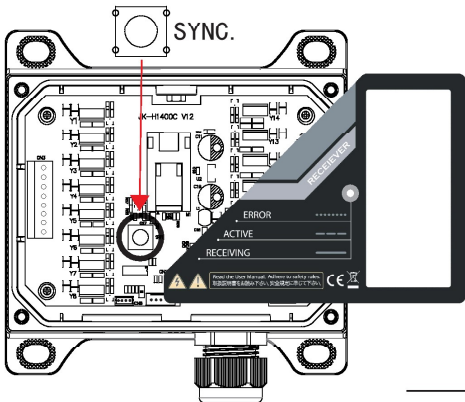

Step2

1. Press STOP for 5 sec to turn off the transmitter. 

2. Press **X3** once then press **X4** once vice versa for 4 times. The Status LED blinks green and red. Press **X2** for (> 5 sec.) the "1" and "2" LED stay ON, then release the button. Press STOP for 5 sec. Done!

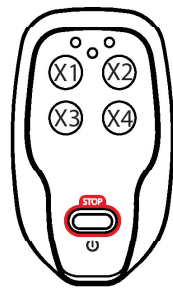


NEW copy


Ps. Keep distance less than 3 feet while copying

(N400) Copy from Transmitter to a new Receiver

Step1


Power the receiver. Press the SYNC. button >3 sec. The STATUS blinks .

 Warning against electrical voltage

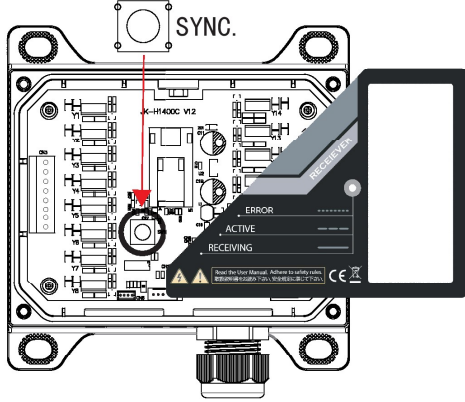


NEW copy

Step2

1. Press stop for 5 sec to turn off the transmitters. 

2. Press **X3** once then press **X4** once vice versa for 4 times. The Status LED blinks green and red. Press **X2** for (> 5 secs) the "1" and "2" LED stay ON, then release the button. Press STOP for 5 sec. DONE!

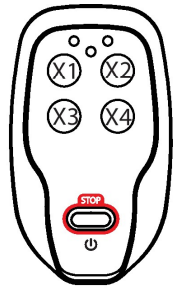

Ps. Keep distance less than 3 feet while copying