




**INMOTION Controls, Inc.**

**KN200 Series**

**KN400 Series**

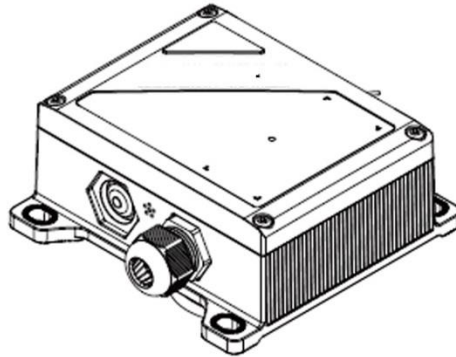

# **Basic Installation Instructions**

**[H] (C4)  
433 MHZ**

**March 2020**

# **Contents**

## **Contents**

Guarantee, service, repairs and maintenance

## **Chapter1: Customer information**

General Information on Safety

## **Chapter2: General description**

General description

END USER INSTRUCTIONS

## **Chapter 3: Receiver**

INSTRUCTION GUIDE

## **Chapter 4: Troubleshooting**

## **Chapter 5: Accessories**

## **Guarantee, service, repairs and maintenance**

Inmotion Controls, Inc. products are covered by a guarantee/warranty against material, construction and manufacturing defects. During the guarantee/warranty period, Inmotion may replace the product or faulty parts. Work under guarantee/warranty must be carried out by Inmotion Controls, Inc.

### **The following are NOT covered by the guarantee/ warranty:**

- Faults resulting from normal wear and tear
- Parts of a consumable nature such as pushbuttons, relays, fuses etc.
- Products that have been subject to unauthorized modifications
- Faults resulting from incorrect installation and use
- Condensation and water damage

### **Maintenance:**

- Repairs and maintenance must be carried out by qualified personnel.
- Use spare parts from Inmotion Controls, Inc. only.
- Contact your representative if you require service or other assistance.
- Keep the product in a dry, clean place.
- Keep contacts and antennas clean.
- Wipe off dust using a slightly damp, clean cloth.

## **INTENDED USE**

The HS and HM Receiving units are intended as the control unit interface for the Radio Remote Control for Hoists, Cranes, Monorail and Material Handling Equipment.

## **OPERATING MEHTODS**

The receiving unit accepts signals from the Radio Transmitter and processes them to open or close Specific relays for Hoist, Trolley, Bridge and various auxiliary functions.

## **Chapter 1: Customer Information**



Thank you for purchasing an Inmotion Controls, Inc. radio remote control.

### **READ ALL INSTRUCTIONS CAREFULLY BEFORE MOUNTING, INSTALLING AND CONFIGURATING THE PRODUCT.**

This manual includes general information concerning the operation of the radio remote control transmitter.

#### **General Information on Safety**

- Persons under the influence of drugs and/or alcohol and/or other medicine that impairs their reaction may not assemble, disassemble, install, put into operation, repair or operate the product.
- All conversions and modifications of an installation/system must conform to the relevant safety requirements. Work on the electrical equipment must be performed only by qualified, authorized personnel and in accordance with the relevant safety requirements.
- In the event of malfunctioning, visible defects or irregularities, the product must be stopped, switched off and the relevant master switches must be switched off.

<b>Symbols and Definitions for Warnings</b>	
	Warning against hazardous situation
	Warning against electrical voltage

#### **FCC Part 15 (FCC ID: RN489896162JK01)**

\* This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference and (2) this device must accept any interference received, including interference that may cause undesired operation.

\* You are cautioned that changes or modifications not expressly approved by the party responsible for compliance could void your authority to operate the equipment.

#### **European Union Regulatory Notice**

This device bearing the CE marking is in compliance with the essential requirements and other relevant provisions of Directive 1999/5/EC. This device complies with the following harmonized European standards.

Safety: EN 60950-1:2006+A11:2009+A1:2010+A12:2011

EMC: ETSI EN30 1489-1 V1.9.2 2001-09; ETSI EN 301 489-3 V1.4.1 2002-08

Radio: ETSI EN 300 220-1 v2.4.1: 2012; ETSI EN 300 220-2 v2.4.1: 2012

The following CE marking is valid for EU harmonized telecom products.


**CE 0560**

#### **IC Statement (IC: 10821A-8989616201)**

This device complies with Industry Canada license-exempt RSS standard(s). Operation is subject to the following two conditions: (1) this device may not cause interference, and (2) this device must accept any interference, including interference that may cause undesired operation of the device.

## Chapter 2: General Description

### Transmitter

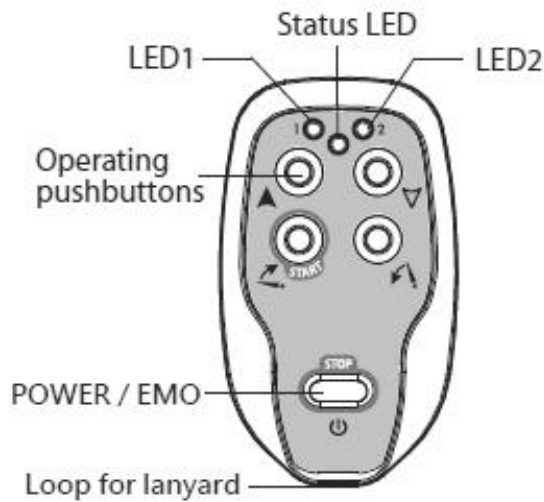

### Technical data

#### TRANSMITTER


Frequency range	433MHz
Modulation method	4 FSK
Typical operating range	100M
Control system	PLL
Antenna impedance	50Ω
Typical response time for Stop command and commands	50mS~100mS
Power supply	LR6(AA)1.5V x2
Antenna	Internal
Average power consumption	16mA@DC3V (default setting)
Radio-frequency power	<10dBm (default setting)
Operating and storage temperature	(-20°C)~(+55°C) / (-40°C)~(+65°C)
Protection degree	IP65
Dimensions	79 × 45.7 × 23.5 mm
Weight (including battery)	approx.325g
Housing material	PA6(30% GF)

### STOP, ON/OFF switch


The N series transmitter has a STOP button on the button side.

The STOP switch has 2 functions:

1. Press to "STOP".
2. Press 5 secs for turning ON and OFF the transmitter.

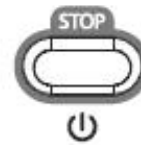

### Start the transmitter.

1. Press  5 secs for turning ON the transmitter.
2. Press the "START" button.



### Turning the transmitter off


Press  5 secs for turning OFF the transmitter.

The transmitter turns off. All relays deactivate.

### Change the batteries


BATTERY TYPE: 2 x 1.5V(LR6 AA)

1. Remove the battery cover
2. Remove both batteries.

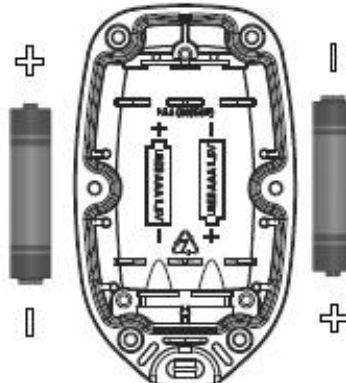

## Chapter 3: Receiver


**WARNING!** The receiver must NOT be opened by any other than a qualified installer. Make sure to turn the electricity off before opening the receiver.

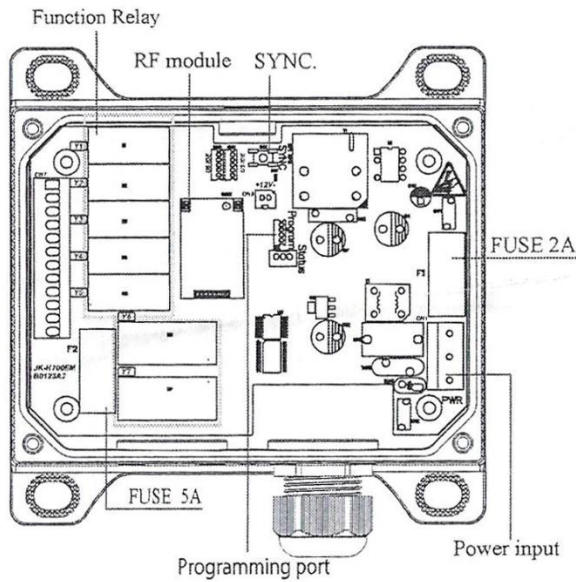

### Technical data


Frequency range	433.0525 ~ 434.7775 MHz
Modulation method	4 FSK
Sensitivity	-112dBm@baud 1.2K bps
Control system	PLL
Antenna impedance	50 ohms
Typical response time for Stop command and commands	50ms ~ 100ms
Input power(AC)	24 ~ 240V AC , 50/60Hz
Input power(DC)	24 ~ 160V DC
Power system	switching
Antenna	Internal
Standby power	0.97W
Operating temperature	(-20°C) – (+55°C)
Storage temperature	(-40°C) – (+70°C)
Dimensions	5.59" x 5.55" x 2.3"
Weight	1.76Lbs.
Housing material	PA6(30% Glass Filled)

### Mounting Dimensions

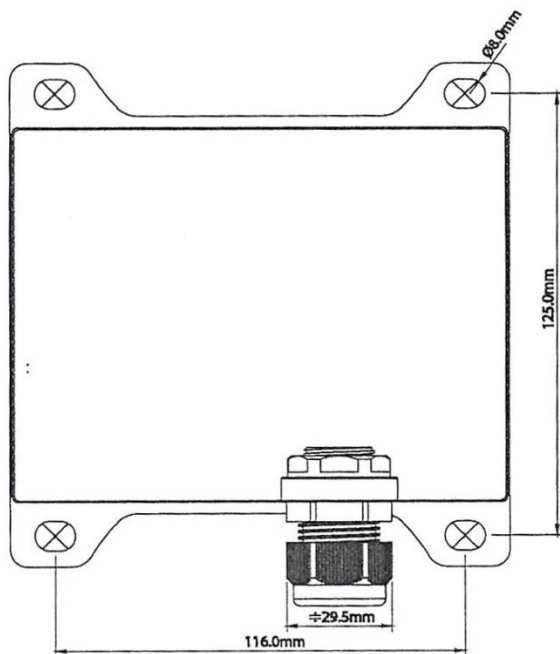


### Instruction guide

**WARNING!** DO NOT FLUSH MOUNT THE RECEIVING ASSEMBLY. PLEASE MAINTAIN PROPER CLEARANCE AS SHOWN. PLEASE USE THE SUPPLIED MOUNT!

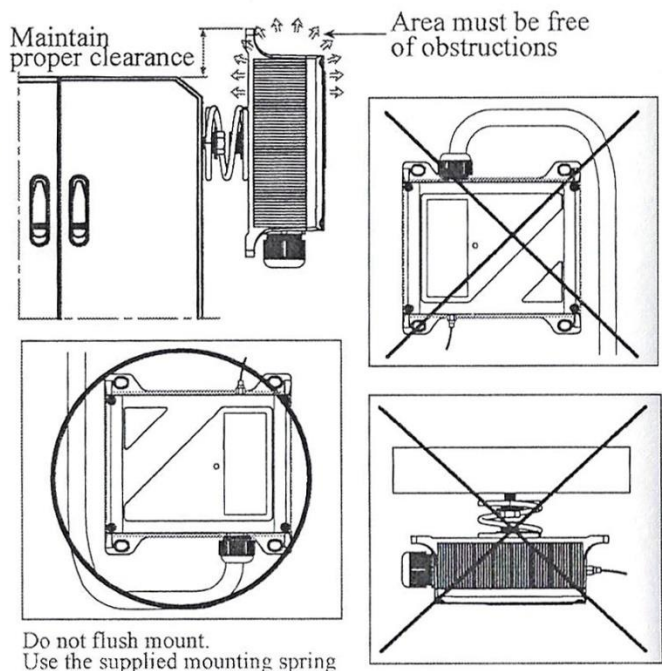


## Chapter 3: Receiver

### KN200 Wiring Diagram

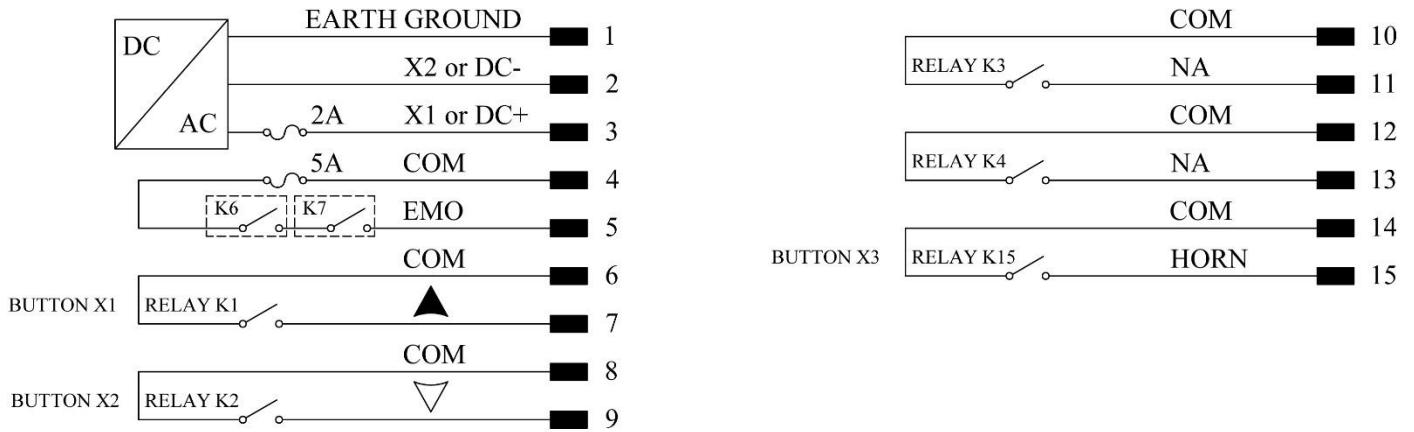


### KN400 Wiring Diagram

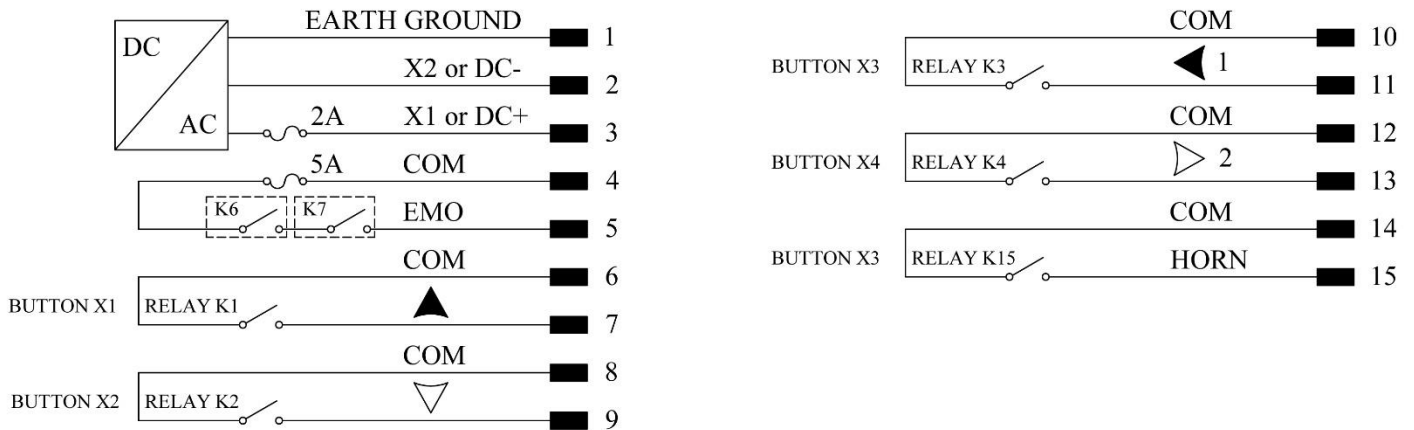

## Chapter 3: Receiver

Receiver Dimensions (Not to scale)

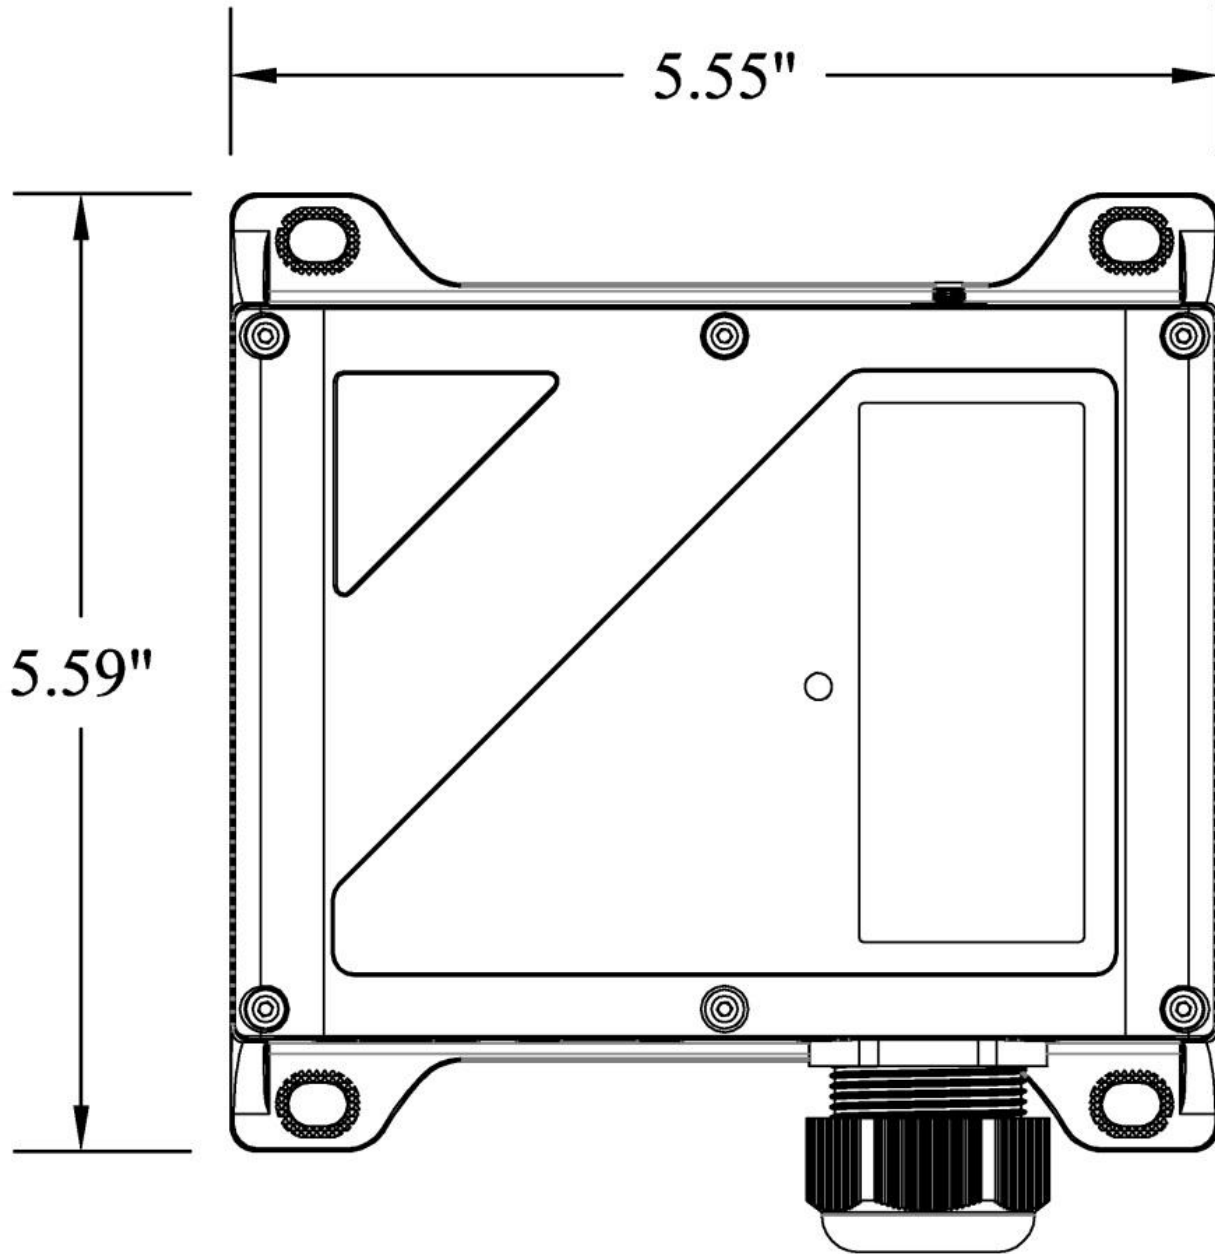

## Chapter 4: Troubleshooting

## Transmitter

LED Signal			Failure Analysis	Solution
	● Short	█ Long		
	Red LED	Green LED	-Corrosion on the Battery Terminals  -Low Battery	-Clean the Battery Terminals  -Replace the batteries.
Status				
	●●●●●●			
	Red LED	Green LED	-Transmitter is not Communicating with the receiver.	-Check the power supply of the receiver.  -Check the fuse in the receiver.
Status		●●●●●●		
	Red LED	Green LED	-Pushbutton damaged	-Contact dealer.
Status		●●●●●●		
	█●●			

## Receiver

Should an error occur, the LED of the receiver will indicate the cause.

LED Signal			Failure Analysis	Solution
	● Short	█ Long		
Status	Red LED	Green LED	-RF error	-Check the antenna and make sure it is not loose. -Contact dealer.
	█●●●			
Status	Red LED	Green LED	-Receiver is not powered.	-Check the fuse. -Check the power supply.

Status	Red LED	Green LED	-invalid data (from a different transmitter) received.
		█	

## Chapter 5: Accessories





**Lanyard**



**INMOTION Controls, Inc.**

**[www.inmotioncontrols.com](http://www.inmotioncontrols.com)**

**888-501-2220**